

MOOER

SWEEPER

Bass Filter Pedal

Owner's Manual

Precautions

PLEASE READ CAREFULLY BEFORE PROCEEDING

Power Supply

Please connect the designated AC adapter to an AC outlet of the correct voltage. Please be sure to use only an AC adapter which supplies 9V (+/-10%) DC, center minus. The maximum working voltage shall not exceed 12V, otherwise may be dangerous equipment damage, fire or other problems.

Unplug the AC power adapter when not using or during electrical storms.

Connections

Always turn off the power of this and all other equipment before connecting or disconnecting, this will help prevent malfunction and / or damage to other devices. Also make sure to disconnect all connection cables and the power cord before moving this unit.

Handling

Do not apply excessive force to the switches or controls.

Do not let paper, metallic, or other objects into this unit.

Take care not to drop the unit, and do not subject it to shock or excessive pressure.

Cleaning

Clean only with a soft, dry cloth. If necessary, slightly moisten the cloth.

Do not use abrasive cleanser, cleaning alcohol, paint thinners, wax, solvents, cleaning fluids, or chemical-impregnated wiping cloths.

Interference with other electrical devices

Radios and televisions placed nearby may experience reception interference. Operate this unit at a suitable distance from radios and televisions.

Location

To avoid deformation, discoloration, or other serious damage, do not expose this unit to the following conditions:

- Direct sunlight
- Heat sources
- Magnetic fields
- Extreme temperature or humidity
- Excessive dusty or dirty location
- High humidity or moisture
- Strong vibrations or shocks

Main Features

- Dynamic envelope filter pedal for both bass and guitar
- Unique Funky style filter tone, Clean and Fuzz sweeping switch
- Full metal shell
- Very small and exquisite
- True bypass
- DC 9V Adapter power supply

Effects Explanation

Clean: Excellent dynamic envelope filter effect, unique vocal-like sounds.

Fuzz: Add vintage fuzz tone into the sound.

Panel Instruction

The diagram shows the front panel of the MOOER SWEEPER Bass Filter Pedal. It features a central vertical slider labeled 'INTENSITY'. To the left of the slider is a knob labeled 'RANGE'. To the right is a knob labeled 'RESO'. Above the slider is a footswitch labeled 'DC IN' with a small switch that can be moved between 'Fuzz' and 'Clean'. Below the slider is a knob labeled 'BASS SWEEPER'. At the bottom is a large circular knob labeled 'MOOER'. On the left side, there is an 'OUTPUT' jack. On the right side, there is an 'INPUT' jack. Numbered callouts 1 through 9 point to these specific features.

- 1. TRUE BYPASS Footswitch:** Push down the footswitch to switch between effects and bypass status.
- 2. ON/OFF LED:** Instructs effects or bypass status of SWEEPER, when the LED is lit up, the effects is on.
- 3. DC IN Power Jack:** For power supply, use a 9-volt DC regulated AC adapter (plug polarity is positive on the barrel and negative in the center).
- 4. INPUT Jack:** 1/4" mono audio jack, for connecting bass or guitar.
- 5. OUTPUT Jack:** 1/4" mono audio jack, outputs the signal.
- 6. Mode Switch:** Switch between Clean mode and Fuzz mode.
- 7. RANGE Knob:** Adjust the frequency range.
- 8. RESO Knob:** Adjust the intensity of resonance.
- 9. INTENSITY Knob:** Adjust the sensitivity of filter effects.

Specification

Working Modes: 2 (Clean/Fuzz)

Input: 1/4" monaural jack (impedance: 220k Ohms)

Output: 1/4" monaural jack (impedance: 1.4k Ohms)

Power Requirements: AC adapter 9V DC (center minus plug)

Current Draw: 7 mA

Dimensions: 93.5mm (D) x 42mm (W) x 52mm (H)

Weight: 160g

Accessories: Owner's Manual

** Disclaimer: Any specification's update won't be amended in this manual.*

MUGER

SWEEPER

贝斯滤波单块

用户手册

注意事项

使用前请仔细阅读

电源供应

请使用正确的交流电源插座连接电源变压器。
 请使用内负外正的9V(+/-10%)电源变压器，最大工作电压不得超过12V，否则将会导致设备损坏，着火或者其他问题。
 不使用时或雷雨天时请拔下电源。

连接

连接设备或断开连接前，请务必关闭电源及其它设备，这将有助于避免故障和损坏其它设备。另外，要确保移动本机前断开所有的连接线和电源线。

放置场所

为防止变形、变色，及其它严重损坏，请避免以下情况：

- 阳光直射
- 磁场
- 多尘或不洁的地方
- 强烈震动或摇晃
- 热源
- 高温潮湿
- 湿度较大

电音干扰

在使用本机时，收音机和电视机可能会造成干扰。使用本机时要远离收音机和电视机。

清洁

请用干燥柔软的布清洁本机。如有必要，可用稍微湿润的布。切勿使用粗糙的清洁粉、酒精、涂料稀释剂、蜡、溶剂、清洁剂及化学试剂等浸渍抹布。

操作

请勿用蛮力使用开关及控制元件。
 请勿让纸屑、金属制品及其它物体落入机内。
 注意不要掉落，不要使其受到冲击及过度压力。

性能概述


- 贝斯动态包络滤波单块效果器，同样适用于吉他
- 与众不同的Funky风格滤波效果，可切换原声及法兹滤波方式
- 全金属外壳
- 外观小巧精致
- 纯直通设计
- 9V电源供电

模式说明

Clean: 出色的动态包络滤波效果。

Fuzz: 加入经典Fuzz音色。

面板说明

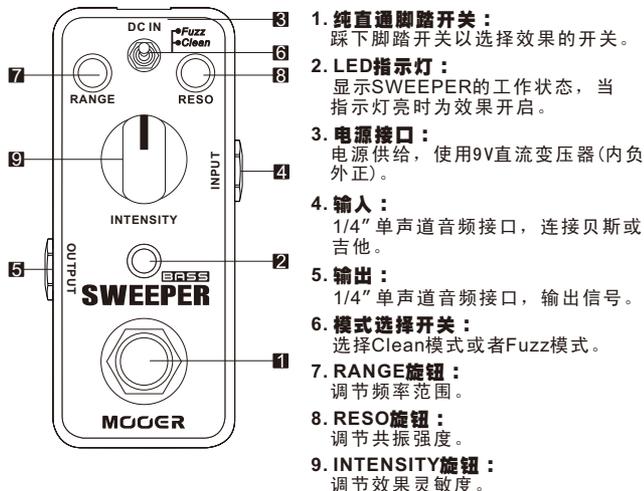

1. **纯直通脚踏开关：**
 踩下脚踏开关以选择效果的开关。
2. **LED指示灯：**
 显示SWEEPER的工作状态，当指示灯亮时为效果开启。
3. **电源接口：**
 电源供给，使用9V直流变压器(内负外正)。
4. **输入：**
 1/4"单声道音频接口，连接贝斯或吉他。
5. **输出：**
 1/4"单声道音频接口，输出信号。
6. **模式选择开关：**
 选择Clean模式或者Fuzz模式。
7. **RANGE旋钮：**
 调节频率范围。
8. **RESO旋钮：**
 调节共振强度。
9. **INTENSITY旋钮：**
 调节效果灵敏度。

技术参数

- 工作模式：** 2 (Clean/Fuzz)
输入： 1/4"单声道音频接口(阻抗: 220k Ohms)
输出： 1/4"单声道音频接口(阻抗: 1.4k Ohms)
电源供给： 9V直流变压器(内负外正)
工作电流： 7 mA
尺寸： 93.5mm (D) × 42mm (W) × 52mm (H)
重量： 160g
附件： 用户手册

*免责声明：参数更新恕不另行通知。