### MOGER

# SkyVerb

**Digital Reverb Pedal** 

# **Owner's Manual**

### Precautions

### PLEASE READ CAREFULLY BEFORE PROCEEDING

### Power Supply

Please connect the designated AC adapter to an AC outlet of the correct voltage. Please be sure to use only an AC adapter which supplies 9V (±10%) DC, center minus. The maximum working voltage shall not exceed 12V, otherwise may be dangerous equipment damage, fire or other problems. Unplug the AC power adapter when not using or during electrical storms.

### Connections

Always turn off the power of this and all other equipment before connecting or disconnecting, this will help prevent malfunction and / or damage to other devices. Also make sure to disconnect all connection cables and the power cord before moving this unit.

### Handling

Do not apply excessive force to the switches or controls. Do not let paper, metallic, or other objects into this unit.

Take care not to drop the unit, and do not subject it to shock or excessive pressure.

### Cleaning

Clean only with a soft, dry cloth. If necessary, slightly moisten the cloth. Do not use abrasive cleanser, cleaning alcohol, paint thinners, wax, solvents. cleaning fluids, or chemical-impregnated wiping cloths.

### Interference with other electrical devices

Radios and televisions placed nearby may experience reception interference. Operate this unit at a suitable distance from radios and televisions.

### Location

To avoid deformation, discoloration, or other serious damage, do not expose this unit to the following conditions:

- · Direct sunlight
- Magnetic fields
- · Excessive dusty or dirty location
- Strong vibrations or shocks

· Heat sources

- Extreme temperature or humidity
- · High humidity or moisture

# Main Features

- High quality digital reverb pedal, using a 32 bit fixed point DSP chip
- Three reverb modes: Studio/Church/Plate
- Full metal shell

- True bypass switch
- Very small and compact design DC 9V adapter power supply


### Explanation

Studio: warm & natural indoor reverb, and the decay knob can show different sizes of indoor reverb effects

Church: church reverb, empty and smooth natural reflex reverberation.

Plate: plate reverb, let the steel or gold tinsel vibrate and get the man-made mixed sound by refering to the vibration frequency.

### Panel Instruction

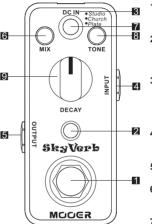

- 1. TRUE BYPASS Footswitch:
- Push down the footswitch to toggle between on and bypass status.
- 2. ON/OFF LED:

Shows the on/off status of Skyverb. when the LED is lit the effect is engaged.

3. DC IN Power Jack:

For power supply, use a 9-volt DC regulated AC adapter (plug polarity is positive on the barrel and negative in the center).

4. INPUT Jack:

1/4" mono audio jack, for connecting quitar.

5. OUTPUT Jack:

1/4" mono audio jack, outputs the signal.

6. MIX Knob:

Adjust the ratio of original tone and effect tone

7. Mode Switch:

Choose the studio, church, plate.

- 8. TONE Knob: Adjusts the tone of reverb.
- 9. DECAY Knob: Adjusts the decay of reverb.

## **Specification**

Input: 1/4" monaural jack (impedance: 470k Ohms) Output: 1/4" monaural jack (impedance: 100 Ohms)

Power Requirements: AC adapter 9V DC (center minus plug)

Current Draw: 128 mA

**Dimensions:**  $93.5 \text{mm} (D) \times 42 \text{mm} (W) \times 52 \text{mm} (H)$ 

Weight: 170g

Accessories: Owner's Manual

\* Disclaimer: Any specification's update won't be amended in this manual.

Micro Series

### MOOER

# Sky Verb 数字混响单块

# 用户手册

### 注意事项

### \*使用前请仔细阅读\*

### 电源供应

请使用正确的交流电源插座连接电源变压器。 请使用内负外正的9V(±10%)电源变压器,最大工作电压不得超过12V,否则将会 导致设备损坏,着火或者其他问题。 不使用时或雷雨天时请拔下申源。

### 连接

连接设备或断开连接前,请务必关闭电源及其它设备,这将有助于避免故障和损害其它设备。另外,要确保移动本机前断开所有的连接线和电源线。

### 放置场所

为防止变形、变色,及其它严重损坏,请避免以下情况:

● 阳光直射 ● 磁场

- → 热源● 高温潮湿
- 多尘或不洁的地方 ● 强列震动或摇晃
  - 湿度较大

### 电器干扰

在使用本机时,收音机和电视机可能会造成干扰。使用本机时要远离收音机和电视机。

### 清洁

请用干燥柔软的布清洁本机。如有必要,可用稍微湿润的布。切勿使用粗糙的清洁粉、酒精、涂料稀释剂、蜡、溶剂、清洁剂及化学试剂等浸渍抹布。

### 操作

请勿用蛮力使用开关及控制元件。 请勿让纸屑、金属制品及其它物体落入机内。 注意不要摔落,不要使其受到冲击及过度压力。

### 性能概述

- 高品质数字混响效果器,采用32bit定点DSP芯片
- 三种混响模式: Studio/Church/Plate
- 全金属外壳
- 外观小巧精致、
- 纯直通脚踏开关
- 9V电源供电

### 模式说明

**Studio:** 温暖自然的室内混响, DECAY旋钮可模拟出不同室内面积的混响效果。

Church: 教堂混响,可得到空旷而平滑的自然反射混响。

-8

-4

-2

-11

Plate: 钢片混响,让钢片或金箔产生振动并参照其振动频率制成的人工混响效果。

### 面板说明

1. **纯直通脚踏开关:** 踩下脚踏开关以选择效果的开关。

2. LED指示灯:

显示Skyverb的工作状态,当指示灯 亮时为效果开启。

3. 电源接口:

电源供给,使用9V直流变压器(内负外正)。

4. 输入:

1/4"单声道音频接口,连接吉他。

5. 输出:

1/4" 单声道音频接口, 输出信号。

6. MIX旋钮:

调节原声与效果声比例。

7. 模式切换开关:

选择Studio、Church、Plate 混响模型。

8. TONE旋钮: 调节混响音色。

 DECAY旋钮: 调节混响深度。

### 技术参数

输入: 1/4" 单声道音频接口(阻抗: 470k Ohms) 输出: 1/4" 单声道音频接口(阻抗: 100 Ohms)

电源供给: 9V 直流变压器(内负外正)

DC IN • Studio • Church

DECAY

SkyVerb

MODER

TONE

INPUT

6

9

MIX

工作电流: 128mA

**尺寸:** 93.5mm (D) × 42mm (W) × 52mm (H)

**重量:** 170g **附件:** 用户手册

\*免责声明:参数更新恕不另行通知.